



**Materials:**

**Free Standing Lace Design(s)**

**Ultra Solvy - Water Soluble Stabilizer  
Thread & Bobbin Thread (same color)**

**Sharp 11 Needle**

**Spray Starch**

**Wax Paper**

**Paper Towels**

**Bowl & Water**

**You can use these instructions for most free standing lace designs.**

### **Step 1:**

**Cut a piece of Solvy that is a little larger than your hoop.**




### **Step 2:**

**Hoop Solvy, making sure that it is hooped very tightly.**




### **Step 3:**

**Place hoop onto your machine and embroider the lace design of your choice.**

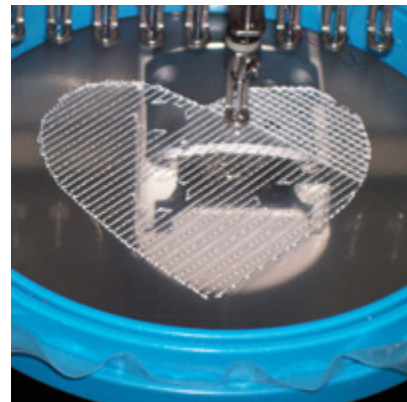

### Step 4:

Once the design is done embroidering.  
Remove from the machine and trim  
the excess solvy around the outside of  
the design.

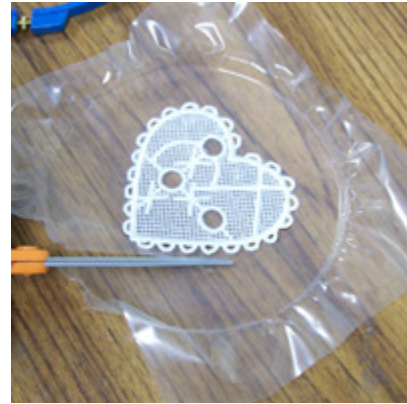

### Step 5:

Then add hot/warm water to your  
container. The water should be high  
enough in the bowl so that the entire  
lace heart will be submerged.



### Step 6:

Place your lace design inside the  
container. Let the design soak for  
about 10 – 15 minutes. This will  
remove the solvy from the design.





### Step 7:

**Remove the design from the water and blot dry with the paper towel.**



### Step 8:

**Now place the design on wax paper and spray with starch, flip the design over and spray with starch again. You do not need a lot of starch unless you would like it to be very stiff.**



### Step 9:

**Place another piece of wax paper on top of the design. To make sure the design dries flat add a heavy book(s) on top and leave it there for 12 to 24 hours.**



**Step 10:**

**Iron the lace heart of desired, making sure to place a thin cloth over the lace so it does not get scorched by the iron.**

**Now your lace heart is completed and ready to decorate your home.**



**Thank you for your purchase.**